



**Figure 5: Certi-label® Shingle Application**

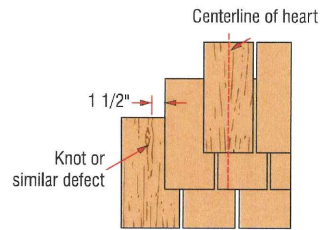

**Figure 5a: Course Alignment**

Fasteners, two (2) per shingle, shall be applied approximately 3/4" from the edge and approximately 1 1/2" above the exposure line. Fasteners shall be long enough to penetrate into the sheathing at least 3/4" or all the way through. Match existing nail lengths. Nails must be driven flush with the surface of the shingle. Do not overdrive nail.

Nails must be stainless steel, Type 304, Type 316, or double hotdipped galvanized with a coating weight of 2 ASTM A 153 Class D (1.0 oz/ft ).

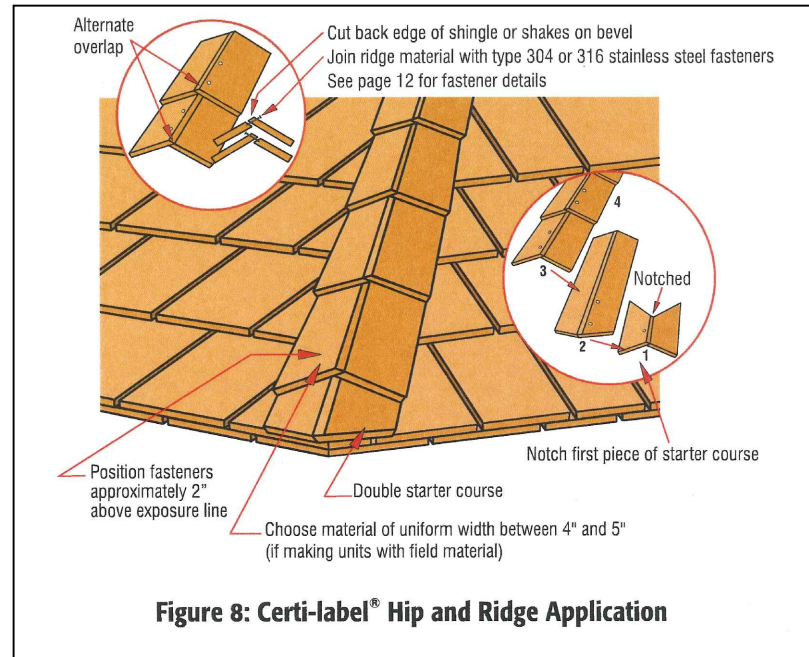

**Figure 8: Certi-label® Hip and Ridge Application**

EXCERPTS TAKEN FROM:  
[www.cedarbureau.org/manuals/imperial/2016/RMI/CSSB-roof-manual-017-March2-introduction.pdf](http://www.cedarbureau.org/manuals/imperial/2016/RMI/CSSB-roof-manual-017-March2-introduction.pdf)

STEPHEN MACK HOUSE ROOF REPLACEMENT  
**MACKTOWN FOREST PRESERVE**  
 2221 FREEPORT ROAD ROCKTON, ILLINOIS 61072

